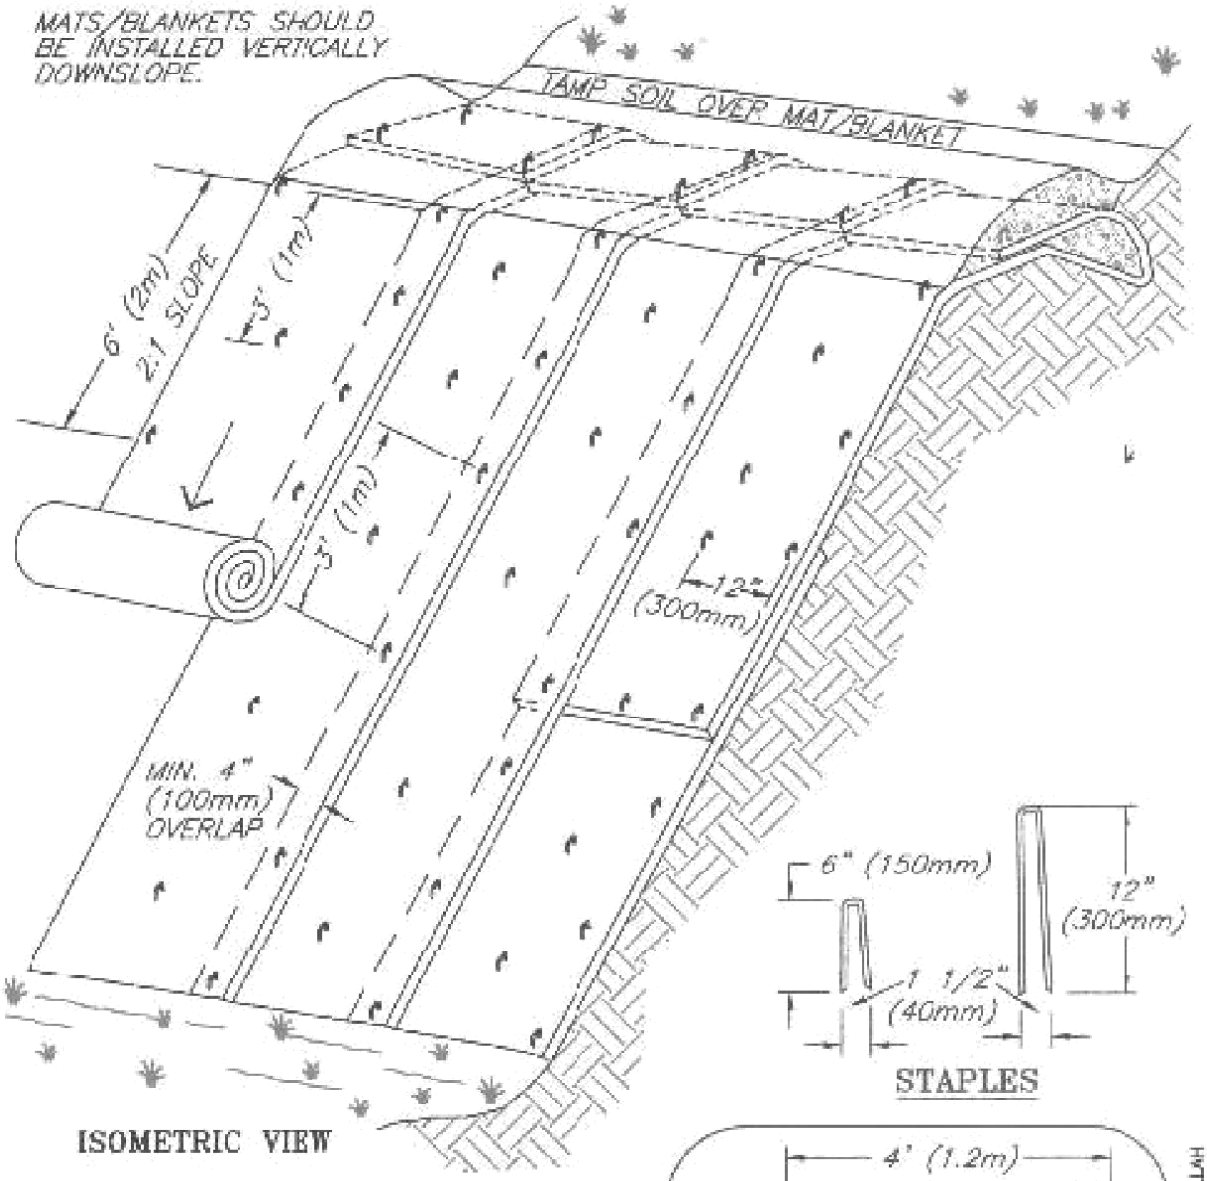

TYPICAL SLOPE SOIL STABLIZATION

NOT TO SCALE

TOP OF SLOPE ANCHOR DETAIL

NOTES:

1. SLOPE SURFACE SHALL BE FREE OF ROCKS, CLODS, STICKS AND GRASS. MATS/BLANKETS SHALL HAVE GOOD SOIL CONTACT.
2. APPLY PERMANENT SEEDING BEFORE PLACING BLANKETS.
3. LAY BLANKETS LOOSELY AND STAKE OR STAPLE TO MAINTAIN DIRECT CONTACT WITH THE SOIL. DO NOT STRETCH.

FIGURE 25
SLOPE STABILIZATION USING EROSION CONTROL BLANKETS

NORTHEAST RELIABILITY INTERCONNECT PROJECT

Bangor Hydro
ELECTRIC COMPANY